

## INSPECTION

### 1. Left/right adjustment switch:

Left side:

#### INSPECT MIRROR SWITCH CONTINUITY

Switch position	Specified condition
UP	1 - 9 6 - 10
RIGHT	6 - 9 5 - 10
DOWN	6 - 9 1 - 10
LEFT	5 - 9 6 - 10

If continuity is not as specified, replace the switch.

### 2. Left/right adjustment switch:

Right side:

#### INSPECT MIRROR SWITCH CONTINUITY

Switch position	Specified condition
UP	7 - 9 6 - 10
RIGHT	6 - 9 8 - 10
DOWN	6 - 9 7 - 10
LEFT	8 - 9 6 - 10

If continuity is not as specified, replace the switch.

### 3. Left/right adjustment switch OFF


Switch position	Tester connection	Specified condition
UP	6 - 10	Continuity
DOWN	6 - 9	Continuity
LEFT	6 - 10	Continuity
RIGHT	6 - 9	Continuity

If continuity is not as specified, replace the switch.

### 4. INSPECT RETRACT SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
RETURN	3 - 10 4 - 9	No Continuity
RETRACT	3 - 10 4 - 9	Continuity


If continuity is not as specified, replace the switch.

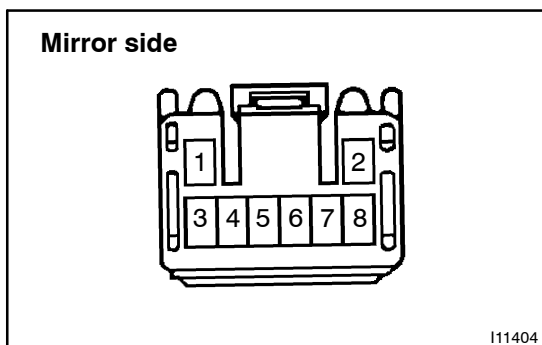

### 5. INSPECT MIRROR MOTOR OPERATION

- (a) Connect the positive (+) lead from the battery to terminal 8 and the negative (-) lead to terminal 7, and check that the mirror turns to the upward.
- (b) Reverse the polarity, and check that the mirror turns to the downward.
- (c) Connect the positive (+) lead from the battery to terminal 6 and the negative (-) lead to terminal 7, and check that the mirror turns to the inside.
- (d) Reverse the polarity, and check that the mirror turns outside.

If operation is not as specified, replace the mirror assembly.

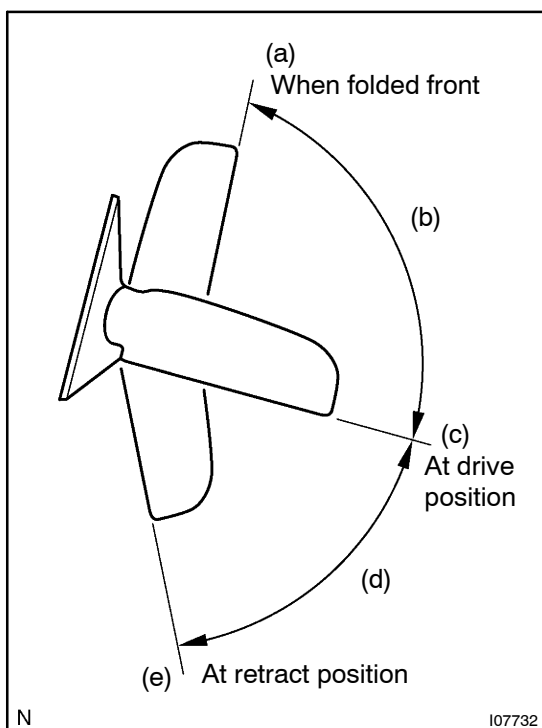

### 6. INSPECT ELECTRICAL RETRACT MOTOR OPERATION

- (a) When folded front position:
  - (1) Connect the positive (+) lead from the battery to terminal 1 and negative (-) lead to terminal 2, check that the mirror operates at retract position.
  - (2) Reverse the polarity, check that the mirror does not operate.

If operation is not as specified, replace the mirror assembly.

- (b) Between folded front position and driving position:
  - (1) Connect the positive (+) lead from the battery to terminal 1 and negative (-) lead to terminal 2, check that the mirror operates at retract position.
  - (2) Reverse the polarity, check that the mirror operate at folded front position.

If operation is not as specified, replace the mirror assembly.

- (c) When driving position:
  - (1) Connect the positive (+) lead from the battery to terminal 1 and negative (-) lead to terminal 2, check that the mirror operates at retract position.
  - (2) Reverse the polarity, check that the mirror does not operate.

If operation is not as specified, replace the mirror assembly.

- (d) Between driving position and retract position:
  - (1) Connect the positive (+) lead from the battery to terminal 1 and negative (-) lead to terminal 2, check that the mirror operates at retract position.
  - (2) Reverse the polarity, check that the mirror operate at return position (Stopping at driving position).

If operation is not as specified, replace the mirror assembly.

(e) When retract position:

(1) Connect the positive (+) lead from the battery to terminal 1 and negative (-) lead to terminal 2, check that the mirror does not operate.

(2) Reverse the polarity, check that the mirror operate at return position (Stopping at driving position).

If operation is not as specified, replace the mirror assembly.